


Speaker key operation manual for ONEmicro, ONEmini, ONEmedi

When the speaker is not in play mode, you can select the speaker menu which differs slightly in different speaker models.

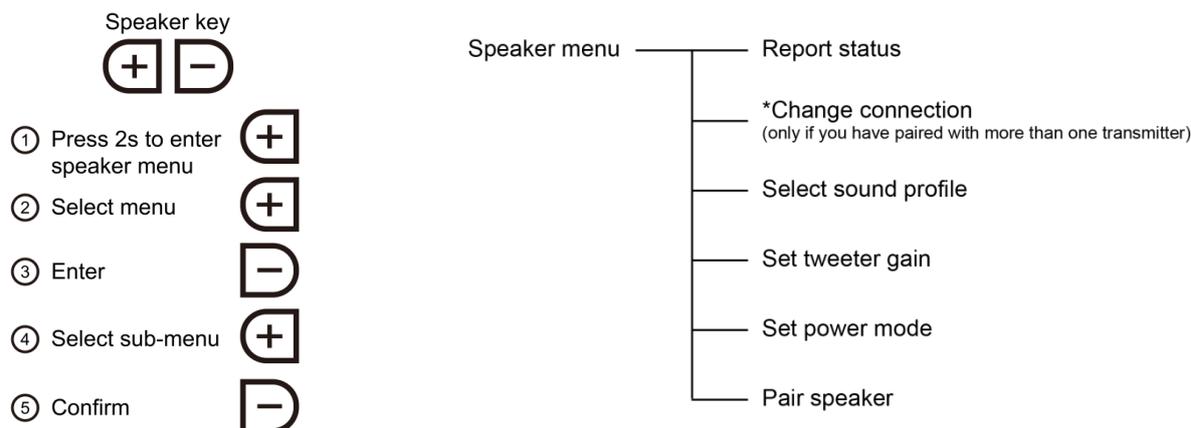

A. Control speaker group volume (in play mode):

: volume up

: volume down

Press and hold both and for 2 seconds to reset the speaker volume to default level

B. Report status

You can hear the speaker information: battery level, position, connection status, sound profile, tweeter gain and power mode

C. Change connection

Each speaker can pair up to three transmitters. If your speakers have been paired with more than 1 transmitter, you can switch the speaker connection to the other transmitter in speaker menu. When you select "Change connection", you will hear "Searching". Speaker will search the other available transmitter (ONEdongle / ONEbox)

D. Set power mode

Power mode	Sound quality	Power management	
		Connected to transmitter	Transmitter power off, speaker in searching
Auto	HQ	Auto power off when it has idled for more than 10 min	Auto power off when it has lost transmitter connection for more than 10 min
ECO	Standard		
Standby	HQ	Always stay on	
Charging	HQ	Always stay on	

* ECO mode : offers ~25% longer play time, ONEmedi not support

* Standby mode : ONEmicro not support

E. Charging

Do not use the data cable packed with ONEbox.micro to charge speaker, otherwise, the speaker will be damaged. When you charge the speaker, the red LED will stay on until it is fully charged.

	Charging hour	Playback hour: Normal volume	Playback hour: Max. volume
ONEmicro	4-5	20	10-12
ONEmini	10-15	100	40-50
ONEmedi	10-15	80	30-40

F. Reset speaker

Press **⏻** for 10 seconds to assert hard reset to the speaker

G. Voice prompt

Press 2s to enter speaker menu **⊕** → Enter **⏻** → Select sub-menu **⊕** → Confirm **⏻**

